



Camera Installation Kit Product Manual

PMON-2000

2015/10/08



ACTi
Connecting Vision

Table of Contents

Precautions	6
<hr/>	
Safety Instructions	8
Introduction	9
<hr/>	
Package Contents.....	9
Physical Description	10
Preparing the Device	13
<hr/>	
Charging the Battery	13
Powering On the Device.....	14
Touch Panel Calibration	14
Using the Carrying Bag.....	15
Connecting a Camera to the Device.....	17
Screen Layout	18
<hr/>	
Main Menu	18
Status Icons	18
Buttons.....	18
Setup Menu	20
AV In (Analog Video Live View)	22
<hr/>	
Speed Dome Camera Live View.....	23
Fixed Camera Live View	23
Enable PTZ Control Function	24
Implementing PTZ Control	25

IP Camera Live View 26

- Automatically Change Device IP Address 26**
- Connect IP Camera (Direct Connection)..... 26**
 - Access the Camera..... 27
 - Digital PT Control (For Fixed Camera)..... 27
 - PTZ Control (For IP Speed Dome Camera) 28
 - Exit the Viewing Mode..... 28
- Device Search 29**
 - Implement Device Search 29
 - Digital PT Control (For Fixed Camera)..... 30
 - PTZ Control (For IP Speed Dome Camera) 30
 - Exit the Viewing Mode..... 31
- UPnP 32**
 - Implement UPnP 32
 - Digital PT Control (For Fixed Camera)..... 33
 - PTZ Control (For IP Speed Dome Camera) 33
 - Exit the Viewing Mode..... 34

Cable Test (CAT5) 35

- Setup for Testing 35**
- Cable Testing 35**

Power over Ethernet (PoE)..... 36

- Enable PoE 36**
- PoE Setup..... 37**
 - Power Level 37
 - PoE Measurement 38
 - PoE Measurement Display..... 38
 - Enable PoE after Device Bootup..... 39
 - PoE Auto-shutdown 39

Snapshot 40

Take Snapshot 40
 Snapshot File Setup..... 40
 Files in USB / SD 40

Video Recording 41

Record Video..... 41

AV Video Setup 42

Access <Step- AV Video>..... 42
 Adjust Brightness / Sharpness / Contrast Value..... 43
 Switch to another Item 43
AV Dome Setup 43
 Access <Step- AV Dome> 43
 Set the Dome Type 44
 Set the Protocol 44
 Set the Baud Rate..... 44
 Set the ID Address 44

IP Camera Setup 45

Access <Setup-IP Connection> and <Setup-IP camera> 45
Setup- IP Connection (Alter Camera Settings)..... 47
 Specify Camera Settings..... 47
 Add a Camera to List 48
 Setup- IP Camera (Load the Network Settings) 48
 Setup- IP Script (IP Camera API Commands)..... 49

Snapshot Setup 50

Image Preview 50
Single File Copy..... 50

All Files Copy	51
Single File Deletion.....	51
All Files Deletion.....	51

Video Setup 52

Video Recording Setup (Video- Rec Setup).....	52
Video Playback	54
Single File Copy	55
All Files Copy	55
Single File Deletion	55
All Files Deletion	55

System Setup 56

Access <Setup- System>	56
Adjust Device Volume	57
Adjust Device Screen Brightness (Backlight)	57
Upgrade Firmware	57
Reset to Factory Defaults.....	58
Auto Shutdown.....	59

Precautions

Read these instructions

Read all the safety and operating instructions before using this product.

Heed all warnings

Adhere to all the warnings on the product and in the instruction manual. Failure to follow the safety instructions given may directly endanger people, cause damage to the system or to other equipment.

Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Trademarks

ACTi and ACTi logo are registered trademarks of ACTi Corporation. All other names and products used in this manual are registered trademarks of their respective companies.

Liability

Every reasonable care has been taken during the writing of this manual. Please inform your local office if you find any inaccuracies or omissions. ACTi will not be held responsible for any typographical or technical errors and reserves the right to make changes to the product and manuals without prior notice.

Federal Communications Commission Statement



This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to the equipment that are not expressly approved by the responsible party for compliance could void the user's authority to operate the equipment.

European Community Compliance Statement



This product has been tested and found to comply with the limits for Class B Information Technology Equipment according to European Standard EN 55022 and EN 55024. In a domestic environment, this product may cause radio interference in which cause the user may be required to take adequate measures.

Safety Instructions

Cleaning

Disconnect this product from the power supply before cleaning.

Accessories and Repair Parts

Use only the accessories and repair parts recommended by the manufacturer. Using other attachments not recommended by the manufacturer may cause hazards.

Water and Moisture

Keep this product in a dry place protected from moisture.

Servicing

Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine if the product is in proper operating condition.

Introduction

Package Contents



Camera Installation Kit



Power Cord



Power Adapter



Universal Converter



Li-ion Battery



Rubber Case




Carrying Bag



Neck Strap



Sunshield

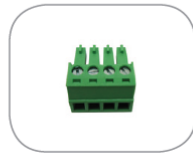

Terminal Block



Network Cable



BNC Cable



Ethernet Terminal Block



Quick Installation Guide

NOTE: The pictures are for reference only, actual items may slightly vary.

Physical Description

Front and Right Views



Back and Left Views



Item	Description
1	Power Indicator LED Lights up when the device power is on.
2	Data Indicator LED Flashes when the device is transmitting or receiving data.

Item		Description
3	LCD Screen	Displays the video and on-screen display (OSD) menu options.
4	Navigation Keys	Press the corresponding arrow to move through the menu items on screen or perform PTZ functions when viewing a PTZ camera.
5	ESC Key	Press to exit the current page without saving or return to the previous page.
6	Power / Snapshot / Enter Key	<p><u>Power Function</u> Press and hold this key for at least 3 seconds to turn on the device. Make sure the main power switch is switched on.</p> <p><u>Snapshot Function</u> When viewing a video, press this key to capture the snapshot of the current video.</p> <p><u>Enter Key Function</u> While navigating a menu, press this key to enter a submenu or select an option.</p>
7	Serial Port Connector	Connects to a serial device, such as a PTZ scanner, etc., using RS-485 protocol.
8	DC 12V Power Connector	Connects to the bundled power adapter to charge the device battery.
9	Ethernet Cable Tester Port	Use for Ethernet cable testing. Connect one end of the network cable to this port and the other end to the bundled Ethernet Terminal Block to detect wiring types (Straight/Cross) or errors (Open, Short, Miswired) from the displayed wire map on the LCD screen.
10	Battery Charging Indicator LED	Lights up while the battery is charging.
11	Power Switch	Slide the switch to turn the main power on or off.
12	Audio Output Jack	Connects to an audio output device, such as a headset, etc.
13	Audio Input Jack	Connects to an audio input device, such as a microphone.
14	Stylus	Use to tap on the LCD screen.
15	BNC Connector	Connects to an analog input device, such as a camera or encoder using BNC connection.
16	Battery Compartment	Houses the device battery.

Item		Description
17	USB Port	Connects to a USB device for data storage or to update the device firmware.
18	Memory Card Slot	Insert a memory card into this slot for data storage.
19	LAN Port / PSE Input	Connects to a Power Supply Equipment (PSE) input, which can be used to provide DC 48V power to the IP camera connected to the <i>PoE Output port</i> . To enable this function, the <i>Power Bank Switch</i> must be "ON".
20	LAN Port / PoE Output	Connects to an IP Camera. This port provides Power-over-Ethernet (PoE) output that can power up the camera.
21	Power Bank Switch	Slide the switch to turn the power bank function on or off. When switched on, the PSE input connected to the PSE IN port will supply power to the camera which is connected to the PoE OUT port.


Preparing the Device

Charging the Battery

Charge the bundled Li-ion battery approximately for two (2) hours before use. The battery supports up to three (3) hours of operating time and varies depending on the connected camera.

To charge the battery, do the following:

1. Slightly press and slide to open the battery compartment cover.

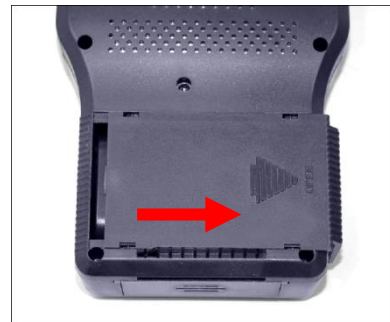

2. Insert the battery towards the direction indicated by the battery arrow.



3. Close the battery compartment cover.
4. Connect the adapter to the **DC 12V Power Connector** of the device.
5. Connect the power cord to the power adapter.
6. Plug the power cord to a power outlet.


The Charging Indicator LED lights up as the battery is being charged.

NOTE:

- Use only the power adapter that is bundled with the device or approved by the manufacturer.
- When unplugging the power cord, pull on the plug head and not on the cable.

Powering On the Device

1. Slide the **Power Switch** to ON.

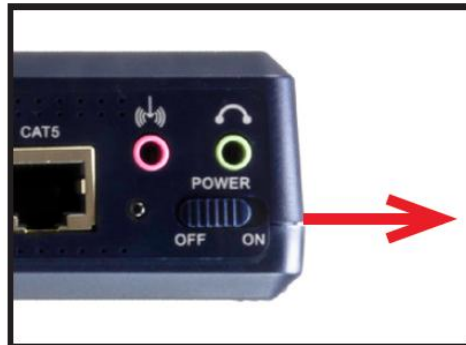


2. Press and hold the **Power Key** for at least 3 seconds. The Power Indicator LED lights up.



NOTE: The boot up process may take a while to complete.

Touch Panel Calibration

For first-time use, the Touch Calibration screen appears. Using the stylus, follow the on-screen instructions to complete the calibration.

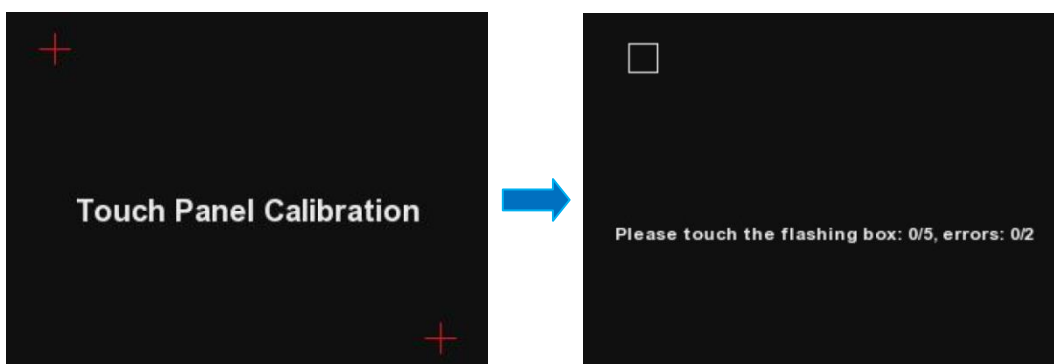


Using the Carrying Bag


For protection and convenience of use, you may use the rubber case for easy-grip or carrying bag to protect and carry the device wherever you go.

To place the device in the carrying bag, do the following:

1. Insert the outer edge velcro through the bottom slot of the device.

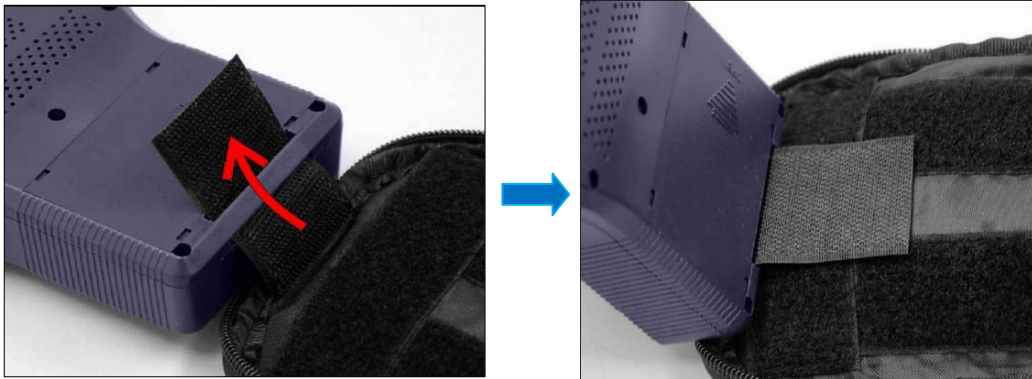

2. Insert the inner edge velcro through the top slot of the device.

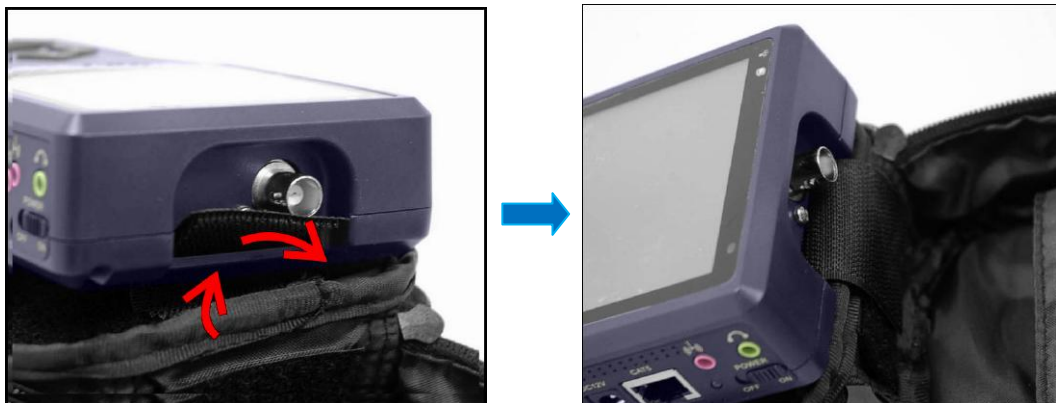

3. Attach the sunshield.




- 4. Close the bag and attach the neck strap.



Connecting a Camera to the Device

After installing the IP camera, use the device to power up the camera via Power-over-Ethernet (PoE).

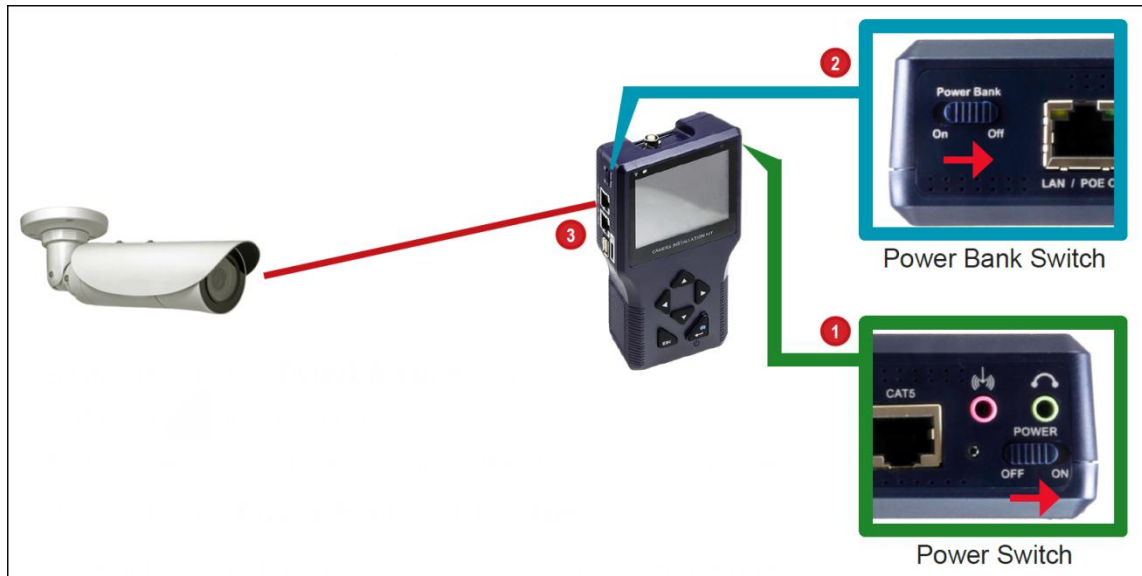

1. Slide the **Power Switch** to “ON”.
2. Press and hold the **Power Key** for at least 3 seconds.

NOTE: The Power Indicator LED lights up. The boot up process may take a while to complete.

3. Connect one end of the network cable to the camera and the other end to the **LAN / POE OUT** port of the device. The Data Indicator LED flashes and the Main Menu appears after the boot up process completes.





Screen Layout

Main Menu





The Main Menu of the Camera Installation Kit is shown as follows:











Status Icons


Item		Description
Battery Status		Indicates the battery level and charging status.
PSE		When the Tester is connected to an IP Camera that is PoE enabled with the Tester's PoE function on, the PSE button will be lightened up, and the Camera will consume power from the Device's internal battery.

Buttons








Item		Description
Main Menu		Return to the Main Menu.
Return		Click on this icon to go back to the previous page.
Enter/Save		Enter the submenu of a function or to save settings.
AV In		View the video display on the LCD screen via the video output of the BNC supported Camera.






Item		Description	
IP Camera 	Connect		Directly connect to the IP Camera with one touch.
	Device Search		Ideal for testing multiple IP Cameras. Tap this icon to find all the IP Cameras in the network. Then select a specific IP Camera by IP or MAC from the address list. Users have to access “ Setup> Setup- IP> Setup- IP connection ” for choosing Camera Type. And relative IP Cameras will be filtered out.
	UPnP		Tap this icon to find all the IP Cameras with UPnP names in the network. Then select a specific IP Camera from the address list. Users have to access “ Setup> Setup- IP> Setup- IP connection ” for choosing Camera Type. And relative IP Cameras will be filtered out.
Cable Test		Detects the CAT5 Cable for wiring types (Straight/Cross) or errors (Short / Open / Miswired).	
Power Over Ethernet		Tap this icon to enable Power over Ethernet (PoE) output for IP Cameras that are PoE / PoE Plus enabled. And the Camera will drain power from the Device’s internal battery.	
PoE Setup		Select for PoE Setups including Power Level, Power over Ethernet (PoE) measurement, PoE measurement display, Enable PoE when booting, and PoE auto-shutdown time.	
Setup		Various Setups for cameras and the Camera Installation Kit can be configured here. Each setup is shown in the following section: Setup Menu.	

Setup Menu

Press the <Setup>  button in the Main Menu, and you will be automatically directed to the Setup Menu as shown below.





Item		Description	
 Setup - AV	AV Video		Adjust analog video's brightness, contrast and sharpness.
	AV Dome		Configure the Speed Dome Camera's protocol, baud rate and ID address.
 Setup - IP	IP connection		The Camera Installation Kit's IP address and the IP Camera's basic profile including IP address, camera type, user name, password and streaming relevant information can all be altered here.
	IP camera		Configure the IP Camera's network settings. Additionally, it is allowed to load the relevant settings from an IP Camera to the Device.
	IP script		Adjust IP Camera video's brightness, color level, contrast and sharpness by editing the API commands. Additionally, it is allowed to import the relevant API commands from other IP Camera to the Device.

Item		Description	
 Setup - Snapshot		Preview and manage the snapshot files.	
 Setup - Video	Record Setup 	Setup the recording video file name, description, and saving path.	
	Playback 	Preview, playback and manage the video files.	
 Setup - System		The Camera Installation Kit's system settings include volume, LCD brightness, firmware upgrade, factory default reset and auto shutdown setup. The MAC address of the Device is also displayed on this page for users' reference.	


AV In (Analog Video Live View)

Users can view analog video through the BNC IN connector on top of the Device as shown below.

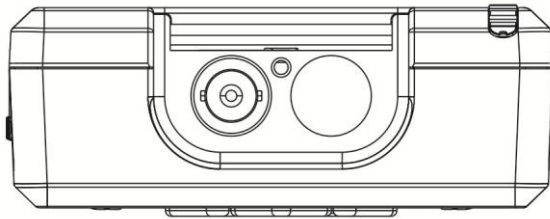


Connect the BNC cable from the video output connector of the Camera to the BNC IN port on the Device. Tap the <AV In>  button on the Main Menu, and users can view live video on the LCD screen.



 To view live video from an IP Camera which supports BNC via AV In function, please make sure the IP Camera streaming is set as "BNC Out".


Speed Dome Camera Live View



Users can implement a Speed Dome Camera's PTZ control in the live view mode.

 **NOTE:** Make sure the Speed Dome Camera's RS-485 lines are correctly connected to the Device's RS-485 terminal block, or PTZ control cannot be manipulated here. Please refer to the PTZ control documentation for more RS-485 information.

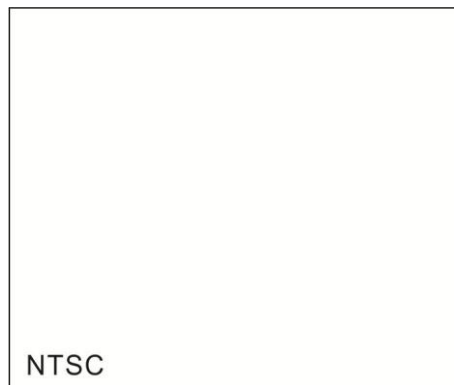

Fixed Camera Live View

In the Fixed Camera's live view mode, the TV System (NTSC / PAL) of the Camera will be displayed on the left bottom of the screen as shown below.




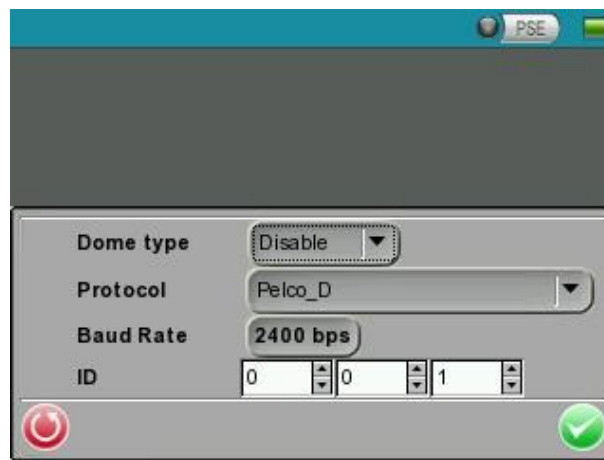
 Users may adjust video brightness, contrast or sharpness for different live viewing quality in the <Setup- AV Video>  function, which can be accessed by the following path: **Setup> Setup- AV> Setup- AV Video**. For more detail, please refer to [AV Video Setup](#) on page 42.

Enable PTZ Control Function


Step 1: Tap the <Setup>  button on the Main Menu and then tap <Setup- AV>  to enter it.



Step 2: Tap <Setup- AV Dome>  and enter its setting page as shown below.




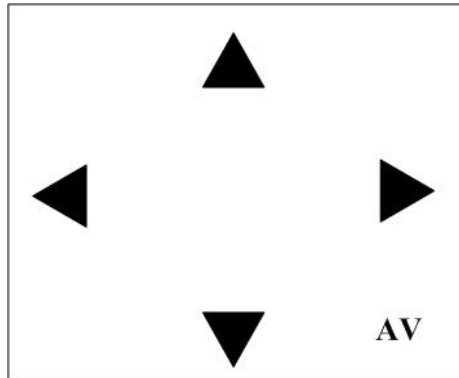
Step 3: Select <Enable> from the <Dome type> drop-down list.



Step 4: Tap <Enter/Save>  to save the setting, and system will automatically direct to the previous screen.



Step 5: Tap <Return>  to return to the Setup Menu.

Implementing PTZ Control

Step 1: Tap <AV In>  button in the Main Menu to enter the live view mode. Meanwhile, there will be four arrow buttons displayed on the screen as shown below.



Step 2: Tap the arrows on the screen to pan and tilt the camera. And press the Up/Down Keys ( ) on the Device's button pad for zooming in/out.

 Users may adjust video brightness, contrast or sharpness for different live viewing quality in the <Setup- AV Video>  function, which can be accessed by the following path: **Setup> Setup- AV> Setup- AV Video**. For more detail, please refer to [AV Video Setup](#) on page 42.

IP Camera Live View

The Camera Installation Kit can automatically detect and recognize the IP Camera that is connected to it. Please connect the IP Camera to the Device's LAN port; plug in the IP Camera if not using PoE. For further information about PoE, please refer to [Power over Ethernet \(PoE\)](#) on page 36.


Automatically Change Device IP Address

After the IP Camera is powered on, the Camera Installation Kit's IP address will be automatically detected and displayed on the screen.


Please refer to the following sections for connecting the IP Camera and viewing live video in alternative ways.

Connect IP Camera (Direct Connection)


Setup for Direct Connecting

Tap the <IP Camera>  icon on the Main Menu to enter the submenu.




Check the IP Camera Profile in the field under the <Connect>  icon as shown below. The IP Camera’s profile details including IP address, camera type, username, password, etc.



If there is any setting required to be altered, please go to <Setup- IP connection>  to change the related IP Camera settings. For more setup information, please refer to [Setup- IP Connection \(Alter Camera Settings\)](#) on page 47.





Access the Camera

Tap the <Connect>  icon on the IP Camera Submenu, and wait for searching to finish. Then the live video will be displayed on the LCD screen.



Digital PT Control (For Fixed Camera)


In the IP Camera’s live view mode, the text “ZOOM” will be displayed on the right bottom of the screen. Tap the text “ZOOM”, and the video will switch to the digital zoom mode (at maximum digital zoom ratio). Meanwhile, the text “P & T” will be displayed on the left bottom of the screen as shown below.



Press the Left/Right Keys ( ), and the image can be horizontally shifted to the left/right with four steps respectively; Press the Up/Down Keys ( ), and the image can be shifted upward/downward with four steps respectively. To leave the Digital PT Control mode, simply tap “ZOOM.”

PTZ Control (For IP Speed Dome Camera)

In the IP Camera’s live view mode, the text “ZOOM” will be displayed on the right bottom of the screen. Tap the text “ZOOM”, and the video will switch to the PTZ control mode. Meanwhile, there will be four arrow buttons displayed on the screen as shown below. Tap the arrows on the screen to pan and tilt the camera. And press the Up/Down Keys ( ) on the Device’s button pad for zooming in/out.

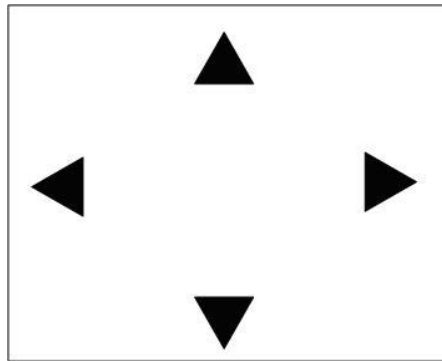


Exit the Viewing Mode

Press the ESC Key () on the Device’s button pad to exit the live view mode, and return to the IP Camera Submenu.


Device Search

If there are multiple IP Cameras in the network, utilize <Device Search> to find all of the cameras.

<Device Search>  can be accessed in IP Camera Submenu.



Implement Device Search

Tap <Device Search>  icon, and wait for searching to finish. Then you will enter the Device Search page as shown below.







Tap <IP/MAC> to switch the detected IP Camera displaying form between IP address and MAC. Select the target IP Camera from the device finding list on the left top of the screen. And setup the duration to wait until connecting to devices. For a custom setting, select <Custom> from the drop-down and then enter the value in the field at the bottom of the setup page. Then tap <CONNECT> beneath the Password column to start connecting. The live view video will be displayed on the screen.



Digital PT Control (For Fixed Camera)


In the IP Camera’s live view mode, the text “ZOOM” will be displayed on the right bottom of the screen. Tap the text “ZOOM”, and the video will switch to the digital zoom mode (at maximum digital zoom ratio). Meanwhile, the text “P & T” will be displayed on the left bottom of the screen as shown below.




Press the Left/Right Keys ( ), and the image can be horizontally shifted to the left/right with four steps respectively; Press the Up/Down Keys ( ), and the image can be shifted upward/downward with four steps respectively. To leave the Digital PT Control mode, simply tap “ZOOM.”

PTZ Control (For IP Speed Dome Camera)

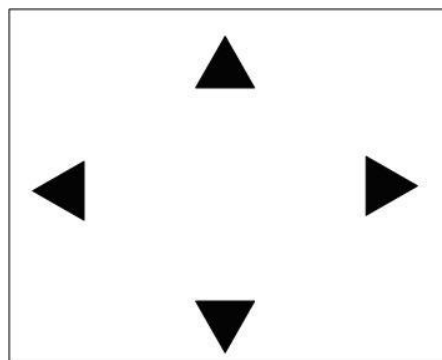

In the IP Camera’s live view mode, the text “ZOOM” will be displayed on the right bottom of the screen. Tap the text “ZOOM”, and the video will switch to the PTZ control mode. Meanwhile, there will be four arrow buttons displayed on the screen as shown below. Tap the arrows on the screen to pan and tilt the camera. And press the Up/Down Keys ( ) on the Device’s button pad for zooming in/out.



Exit the Viewing Mode


Press the ESC Key  on the Device's button pad to exit the live view mode, and return to the IP Camera Submenu.


UPnP

Users can search all of the IP Cameras with UPnP names in the network via <UPnP> . To access <UPnP> setup page, please tap <IP Camera>  on the Main Menu and enter the IP Camera Submenu.



Implement UPnP

Tap <UPnP>  icon, and wait for searching to finish. Then you will enter the UPnP page as shown below.

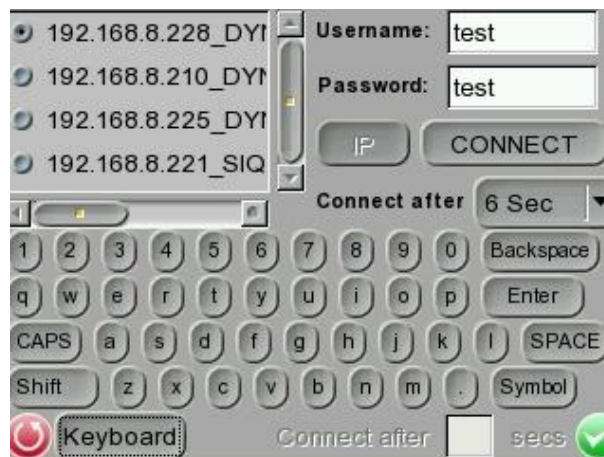





Select the target IP Camera from the device finding list on the left top of the screen. Then setup the duration to wait until connecting to devices. For a custom setting, select <Custom> from the drop-down and then enter the value in the field at the bottom of the setup page. After setup, tap <CONNECT> beneath the Password column to start connecting. The live view video will be displayed on the screen.



Digital PT Control (For Fixed Camera)


In the IP Camera's live view mode, the text "ZOOM" will be displayed on the right bottom of the screen. Tap the text "ZOOM", and the video will switch to the digital zoom mode (at maximum digital zoom ratio). Meanwhile, the text "P & T" will be displayed on the left bottom of the screen as shown below.




Press the Left/Right Keys ( ), and the image can be horizontally shifted to the left/right with four steps respectively; Press the Up/Down Keys ( ), and the image can be shifted upward/downward with four steps respectively. To leave the Digital PT Control mode, simply tap "ZOOM."

PTZ Control (For IP Speed Dome Camera)

In the IP Camera's live view mode, the text "ZOOM" will be displayed on the right bottom of the screen. Tap the text "ZOOM", and the video will switch to the PTZ control mode. Meanwhile, there will be four arrow buttons displayed on the screen as shown below. Tap the arrows on the screen to pan and tilt the camera. And press the Up/Down Keys ( ) on the Device's button pad for zooming in/out.

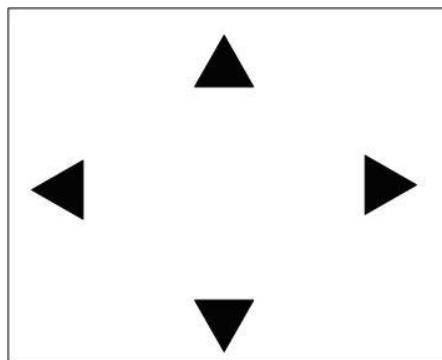

Exit the Viewing Mode

Press the ESC Key  on the Device's button pad to exit the live view mode, and return to the IP Camera Submenu.

Cable Test (CAT5)

Users can check the RJ-45 cable wiring with the supplied UTP Terminal Block

Setup for Testing


Connect one end of the RJ-45 connector to the UTP Terminal Block and the other end to the CAT5 port at the side of the Device.

Cable Testing

Step 1: Tap the <CAT5>  icon on the Main Menu.



Step 2: Tap the <Test>  icon and wait for wiring detection.

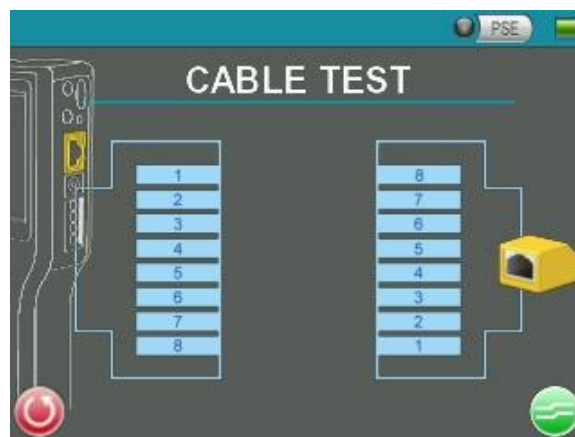

Step 3: Then the cable's wire map will be displayed on the screen. Users can check the RJ-45 cable for its wiring type (Straight/Crossover) and error connection (Shorts / Open / Miswire).

Step 4: Tap <Return>  to return to the Main Menu.



Power over Ethernet (PoE)



The Camera Installation Kit can function as the power sourcing equipment (PSE) and provide power to IP Cameras that are PoE / PoE Plus enabled.




Enable PoE

Step 1: Connect the Ethernet cable from the IP Camera to the LAN / PoE OUT Port on the side of the Device.

Step 2: Tap the <PoE ON>  icon on the Main Menu to enable the PSE, then the PSE indicator light  will be on, which means the Device is now providing power to the IP Camera.

Step 3: The <PoE ON> icon will turn into <PoE OFF>  when the PoE is enabled. Users may tap <PoE OFF>  to turn off the PoE function.


PoE Setup


Tap the <PoE Setup>  icon on the Main Menu to setup including Power Level, Power over Ethernet (PoE) measurement, PoE measurement display, Enable PoE when booting, and PoE auto-shutdown time, etc.



Power Level


The output Power Consumption Level range can be set according to different needs. The options include <Very Low(~3W)>, <Low(3~5W)>, and <Mid-High(6~25W+EXT 12V)>.

 **NOTE:** Please make sure the PoE function is off before Power Level setting.

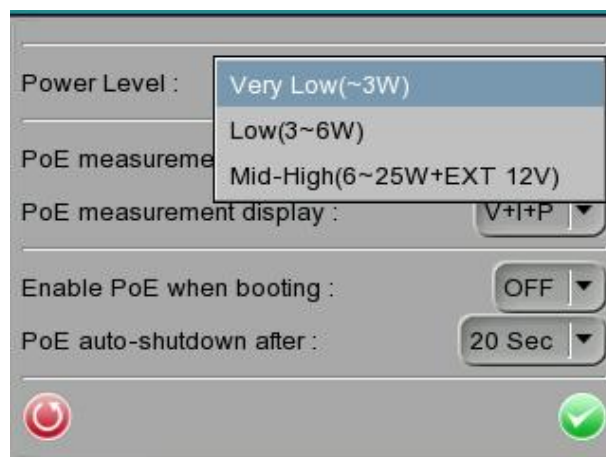


PoE Measurement

The information includes voltage (V), current (I) and power consumption (P) of the Power over Ethernet (PoE) can be measured according to different Ethernet circumstances. Select from the drop-down list of the <PoE Measurement> to fit your Ethernet condition to show the PoE Measurement information on the screen while using PoE.

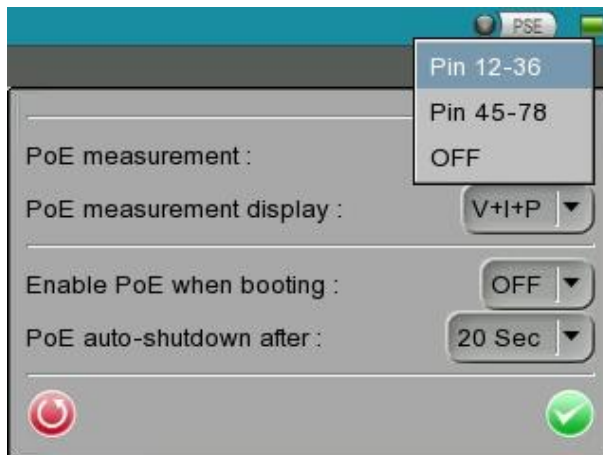


PoE Measurement Display

There are several combinations in <PoE Measurement Display>, select from the drop-down list to show PoE Measurement information including Voltage (V), Current (I), and Power Consumption (P) in different combination.

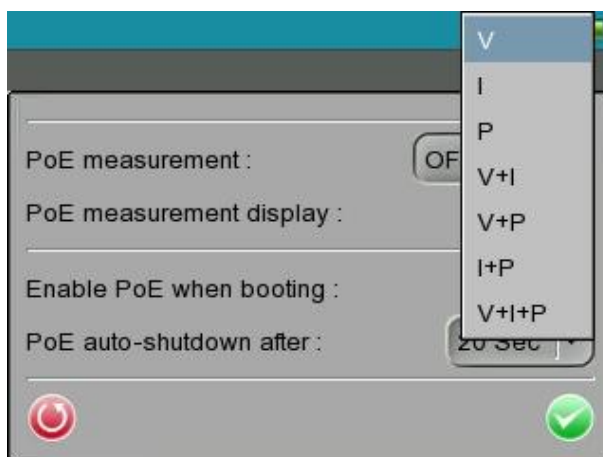



Enable PoE after Device Bootup

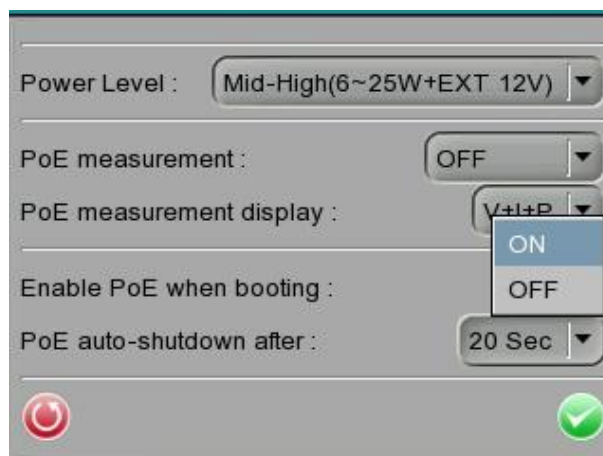
For users who wish to enable PoE in the meantime while the Device is booting up, please select <ON> from the drop-down list of <Enable PoE when booting>, and the Device will provide electricity to the IP Camera right after system startup.



PoE Auto-shutdown

Select the PoE auto-shutdown interval between 20 seconds, 40 seconds and 60 seconds. The setup can aid conserving battery power when there is no IP Camera or other device using the Device as the PSE. The reminder of PoE shutdown will pop out around 5 seconds in advance of shutting down.


Tap <Enter/Save>  to save all the settings and you will then automatically directed to the Main Menu. Or tap <Return>  to exit the setting page without saving settings.

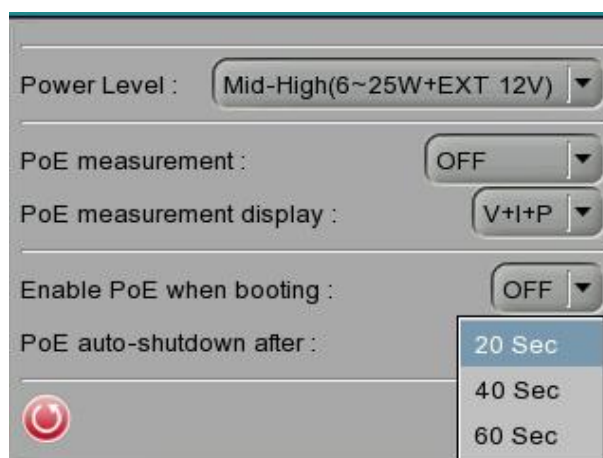


Snapshot

The advanced Snapshot function facilitates saving images in the assigned path when necessary.

Take Snapshot



In the IP Camera's live view mode, press the <Snapshot>  key on the Device's button pad.

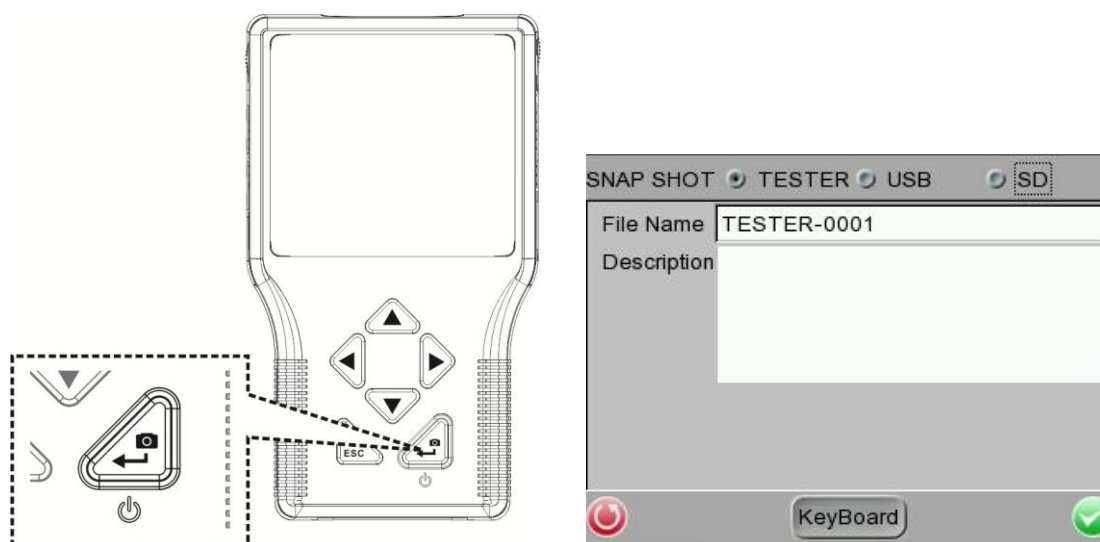Then enter the Snapshot setup page as shown below.



Snapshot File Setup

Assign a storage location among the three options (Device / USB / SD) located on the very top of the snapshot setup page for the snapshot by tapping the round button on the left side of the option. And then enter the file name and description respectively for the snapshot.

Tap <Enter/Save>  to save all the settings and return to the live view mode, or tap <Return>  to exit the setting page without saving settings.

Files in USB / SD

For files that are saved to the USB drive or Micro SD card will automatically be in the created folder named "IMAGE-DATA". Each snapshot's description can be found in the attached .txt file.

Video Recording


The Device supports Video Recording, Video Setup, Video File Managing and Video Playback function for IP Camera live views when necessary.

Record Video

In the IP Camera's live view mode, tap the white text "REC" on the right top corner of the live view screen to start Video Recording. During the recording process, the text will be in red. Tap the text "REC" one more time to stop Video Recording, and the text will be back in white again.





AV Video Setup


The <Setup- AV Video> can be accessed by the following path: Setup> Setup- AV> Setup- AV Video. In the <Setup- AV Video>  menu, users can adjust analog video’s brightness, contrast or sharpness for favorable video display on the Device’s LCD screen under different operating circumstances.



Access <Step- AV Video>



Step 1: Tap <Setup>  on the Main Menu and enter the Second Screen.

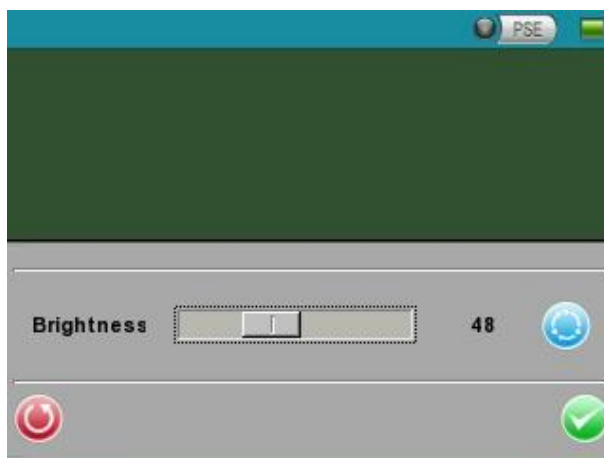Step 2: Tap <Setup- AV>  on the Setup Menu to enter the AV Setup Screen, and then tap <Setup- AV Video>  to enter the setting page as shown below.






In the <Setup- AV Video> setting page, the live video is displayed on the upper screen.

Adjust Brightness / Sharpness / Contrast Value


Move the slider bar by touching the screen or using the Device's Left/Right Keys ( ).


Switch to another Item

Tap the <AV Mode>  icon next to the slider bar or press the Device's Up/Down Keys to switch among Brightness, Sharpness and Contrast setting.

Tap <Enter/Save>  to save all the settings and you will then automatically directed to the previous page. Or tap <Return>  to exit the setting page without saving settings.



AV Dome Setup

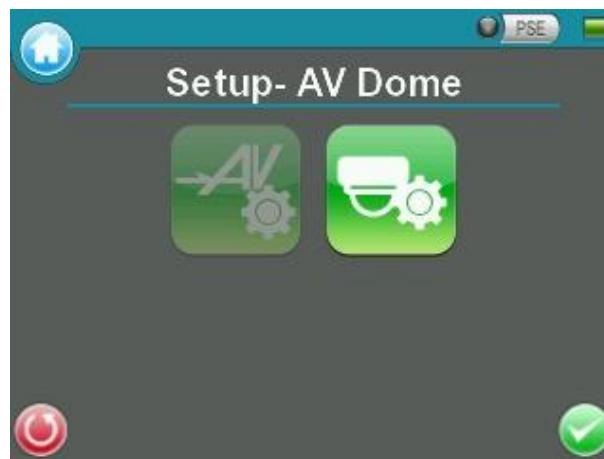
In the <Setup- AV Dome>  menu, users can enable / disable PTZ control and configure the Speed Dome Camera's protocol, baud rate and ID address.



Access <Step- AV Dome>

Step 1: Tap <Setup>  on the Main Menu and enter the Second Screen.

Step 2: Tap <Setup- AV>  on the Setup Menu to enter the AV Setup Screen, and then tap <Setup- AV Dome>  to enter the setting page as shown below.

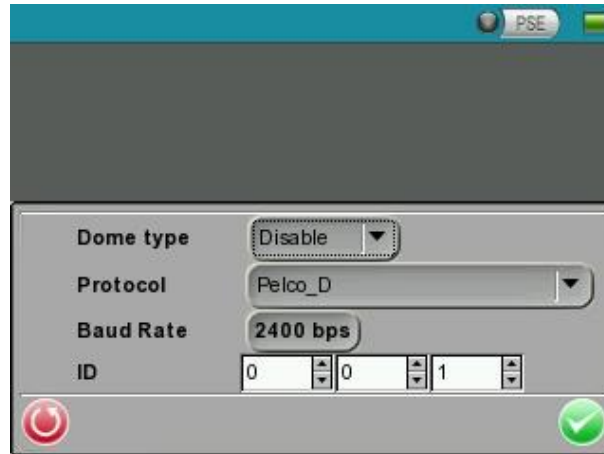

Set the Dome Type

Select <Enable> or <Disable> from the drop-down list of the <Dome Type>. <Enable> means activating PTZ control on the Camera Installation Kit, while <Disable> indicates disabling PTZ control on the Device.

Set the Protocol



Select the protocol for the Speed Dome Camera from the drop-down list.

Set the Baud Rate



Select the baud rate for the Speed Dome Camera from the drop-down list.

Set the ID Address

Enter the three-digit ID address.

Tap <Enter/Save>  to save all the settings and you will then automatically directed to the previous page. Or tap <Return>  to exit the setting page without saving settings.

IP Camera Setup

Users can change the IP Camera's setting, e.g. IP address, camera type, user name, password, streaming format, network settings, in the Setup- IP Submenus: <Setup- IP Connection>  and <Setup- IP Camera> .



Access <Setup-IP Connection> and <Setup-IP camera>

Step 1: Tap the <Setup>  icon on the Main Menu to enter the Second Screen.




Step 2: Tap <Setup- IP>  on the Setup Menu, and then enter the IP Setup Submenu.




The <Setup- IP Connection>  icon and <Setup- IP Camera>  icon are in the IP Setup Submenu.



Setup- IP Connection (Alter Camera Settings)

Tap the <Setup- IP Connection>  icon and enter its setup page as shown below.

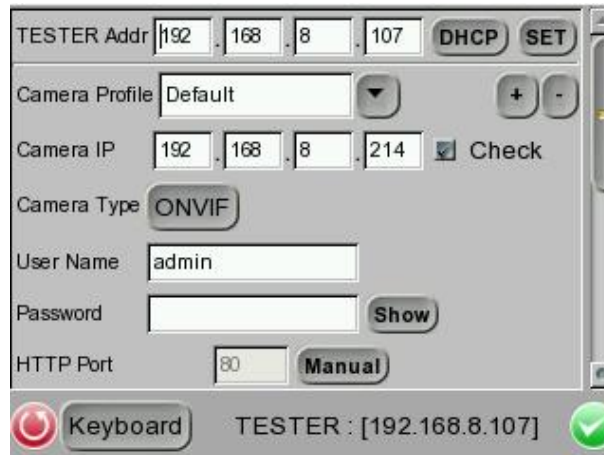

TESTER Addr [192] [168] [8] [107] DHCP SET

Camera Profile Default + -


Camera IP [192] [168] [8] [214] Check


Camera Type ONVIF

User Name admin

Password Show

HTTP Port [80] Manual


Keyboard TESTER : [192.168.8.107] 

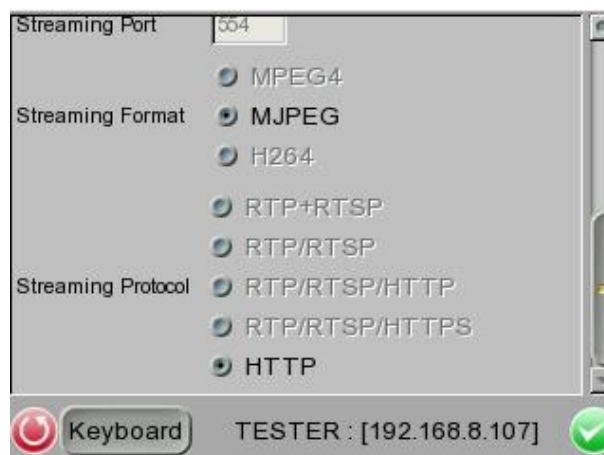

Streaming Port [554]

Streaming Format MPEG4 MJPEG H264



Streaming Protocol RTP+RTSP RTP/RTSP RTP/RTSP/HTTP RTP/RTSP/HTTPS HTTP



Keyboard TESTER : [192.168.8.107] 

Specify Camera Settings



Please specify the IP address, camera type, user name, password, HTTP Port, streaming settings (Streaming port / Format / Protocol), etc. of the connected IP Camera in each column by the stylus touch pen.

Add a Camera to List

To add a camera to the Camera Profile list, please enter its model name in the <Camera Profile> column and tap the icon  on the right side of this column; while canceling a camera, select the camera to be deleted, and then tap the icon . Up to 128 IP Cameras can be assigned for testing.

Tap <Enter/Save>  to save all the settings and you will then automatically directed to the previous screen. Or tap <Return>  to exit the setting page without saving settings.

Setup- IP Camera (Load the Network Settings)


For checking or altering the IP Camera's network settings such as Subnet mask, Default gateway, Primary DNS, Web server port, etc., users can go to the <Setup- IP Camera>  page. Tap the <Setup- IP Camera>  icon and enter its setup page as shown below.



Load Settings from the IP Camera



Please tap the <Load from Camera> button on the top of the menu and the IP Camera's network settings will be shown in the blank field.

⚠ NOTE: Make sure the target camera's settings are correctly configured, or the loading here will fail. For altering the camera settings, please go back up one level by tapping on <Return>


 button. Then enter <Setup- IP Connection> to change camera settings.


Reload the Settings to the IP Camera

After making network setting changes, users may tap the <Set to Camera> button on the top of the setup page to reload the network settings to the camera.

Tap <Enter/Save>  to save all the settings and you will then automatically directed to the previous screen. Or tap <Return>  to exit the setting page without saving settings.

Setup- IP Script (IP Camera API Commands)

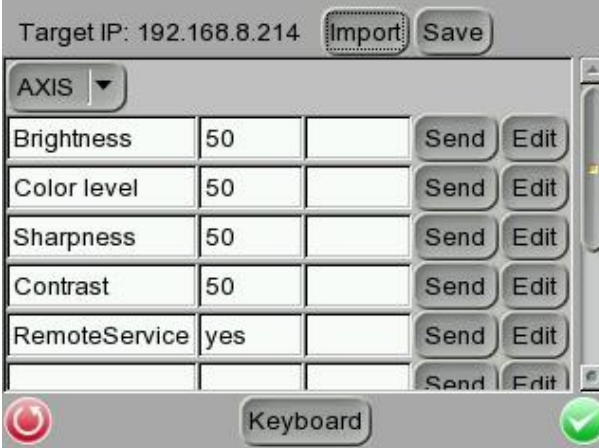

Tap the <Setup- IP Script>  icon and enter its setup page as shown below.





The screenshot shows a mobile application interface for setting IP camera API commands. At the top, it displays 'Target IP: 192.168.8.214' and has 'Import' and 'Save' buttons. Below this is a dropdown menu set to 'AXIS'. A table lists various settings with their current values and 'Send' and 'Edit' buttons for each. At the bottom, there is a 'Keyboard' button, a red power icon, and a green checkmark icon.

Setting	Value	Send	Edit
Brightness	50	Send	Edit
Color level	50	Send	Edit
Sharpness	50	Send	Edit
Contrast	50	Send	Edit
RemoteService	yes	Send	Edit
		Send	Edit

This script tool can be used to set any of the API commands supported by the IP Camera. The unit is supplied with a default set of commands already loaded, but these can be replaced or added to as required. It is also possible to create / edit a script on a PC and then tap the <Import> button to load it via a USB stick (name the file script.txt).

Tap <Save> button to save the settings, or tap <Enter/Save>  to save and return to the previous screen. Tap <Return>  to exit the setting page without saving settings.

Snapshot Setup

Users can preview, copy and delete the image on the <Setup- Snapshot> setup page. Tap the <Setup>  icon on the Main Menu and tap on <Setup- Snapshot>  icon to enter the snapshot file managing page as shown below.

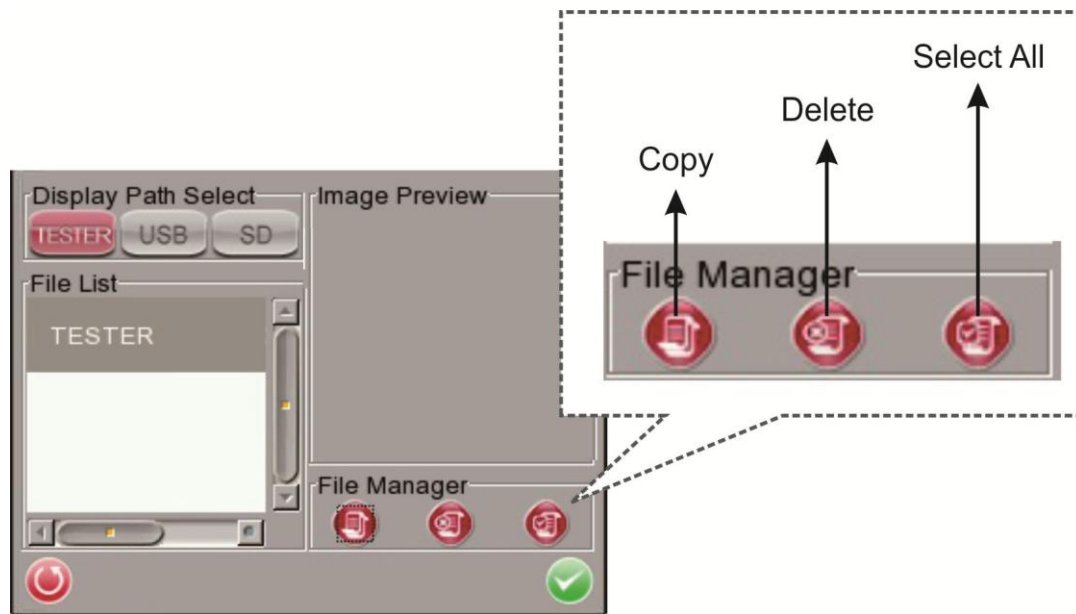







Image Preview

On the <Setup- Snapshot> page, select the snapshot storage path (Device / USB / SD) where the saved files are located. Then all the files will be listed in the <File List> field. To view a snapshot, tap the file name in the list and the image will appear in <Image Preview> as shown above.


Single File Copy

Tap the file name in the list to Copy, and then tap the <Copy>  icon in <File Manager> section below <Image Preview>. Select the location to copy the file to in the pop out window, and then tap <Enter/Save> .



All Files Copy

Tap the <Select All>  con in <File Manager> section below <Image Preview> to select all the files in <File List>. Then tap the <Copy>  icon to copy all the files. Select the location to copy the files to in the pop out window, and then tap <Enter/Save> .

Single File Deletion

Tap the file name in the list to delete then tap the <Delete>  icon in <File Manager> section below <Image Preview>. Tap <OK> on the pop out window to allow file deletion.



All Files Deletion

Tap the <Select All>  icon in <File Manager> section below <Image Preview> to select all the files in <File List>. Then tap the <Delete>  icon to delete all the files. Tap <OK> on the pop out window to allow all files deletion.


Video Setup


Follow the steps below to setup for video recording.

Video Recording Setup (Video- Rec Setup)

Step 1: Tap the <Setup>  icon on the Main Menu to enter the Second Screen. Enter <Setup- Video>  by tapping the icon.



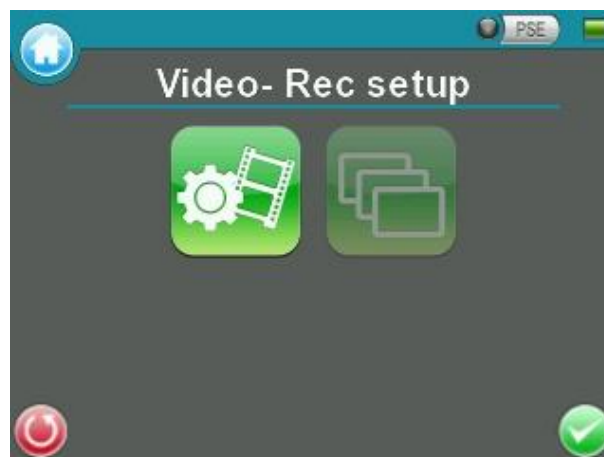

Step 2: Tap <Video- Rec setup>  icon on the Video Setup Screen to access video recording setup page.






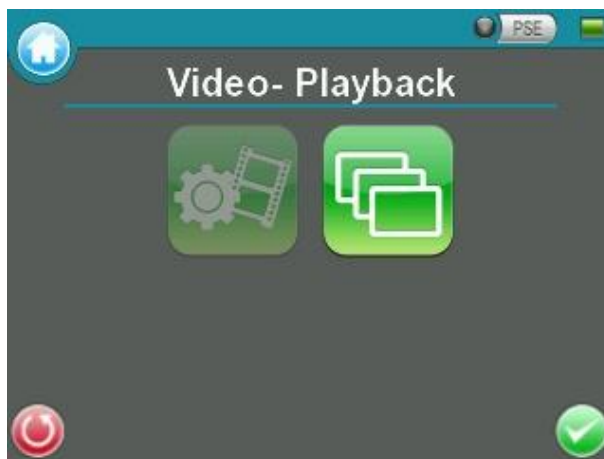
Assign a storage location among the three options (Device / USB / SD) located on the very top of the setup page to save the videos by tapping the round button on left side of the option. And then enter the file name and description respectively for the snapshot.




Tap <Enter/Save>  to save all the settings and return to the live view mode, or tap <Return>  to exit the setting page without saving settings.

Video Playback

Users can preview, copy and delete the video on the <Video- Playback> page. Tap the <Setup>  icon on the Main Menu and tap on <Setup- Video>  to enter the Video Setup Screen. Then tap on <Video- Playback>  icon to access video play back page.



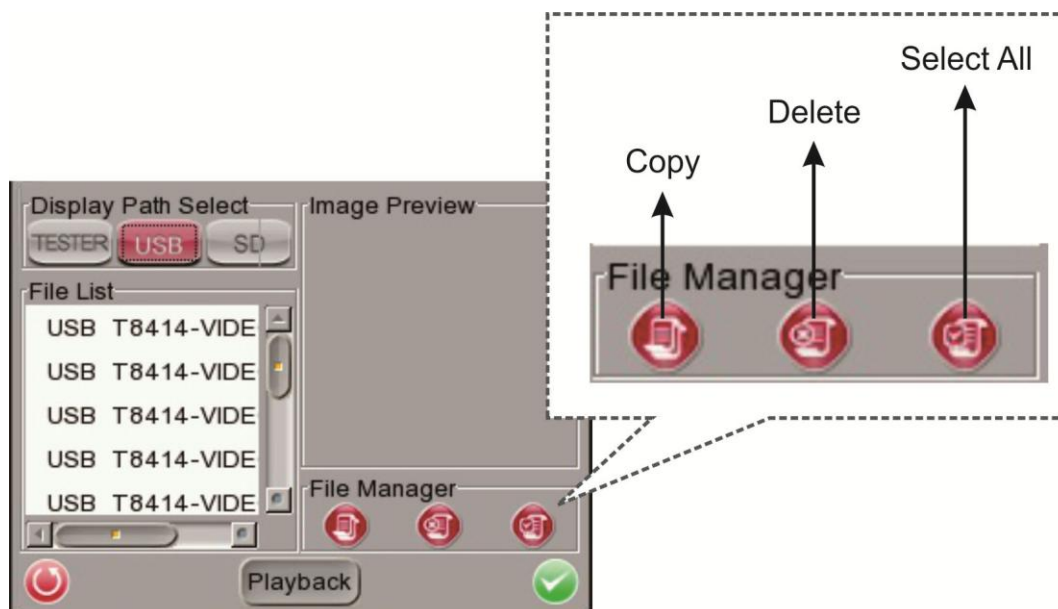

On the <Setup- Snapshot> page, select the recording video storage path (Device / USB / SD). Then all the video files will be listed in the <File List> field. To view a video, tap the file name in the list and tap the <Playback> button on the bottom, the video will appear as full screen.






In the Video Playback mode, press the <ESC>  key on the Device's button pad to stop playback and return to video playback page.


Single File Copy

Tap the file name in the list to Copy, and then tap the < Copy>  icon in <File Manager> section below <Image Preview>. Select the location to copy the file to in the pop out window, and then tap <Enter/Save> .



All Files Copy

Tap the <Select All>  icon in <File Manager> section below <Image Preview> to select all the files in <File List>. Then tap the <Copy>  icon to copy all the files. Select the location to copy the files to in the pop out window, and then tap <Enter/Save> .

Single File Deletion

Tap the file name in the list to delete then tap the <Delete>  icon in <File Manager> section below <Image Preview>. Tap <OK> on the pop out window to allow file deletion.

All Files Deletion

Tap the <Select All>  icon in <File Manager> section below <Image Preview> to select all the files in <File List>. Then tap the <Delete>  icon to delete all the files. Tap <OK> on the pop out window to allow all files deletion.


System Setup

On the system setup page, users can adjust the volume or the brightness of the Camera Installation Kit's LCD screen, implement firmware upgrade, restore all the system settings to factory default and auto shutdown time.


Access <Setup- System>

Step 1: Tap the <Setup>  icon on the Main Menu.



Step 2: Tap the <Setup- System>  icon on the Setup Menu to enter the Device's system setup page.



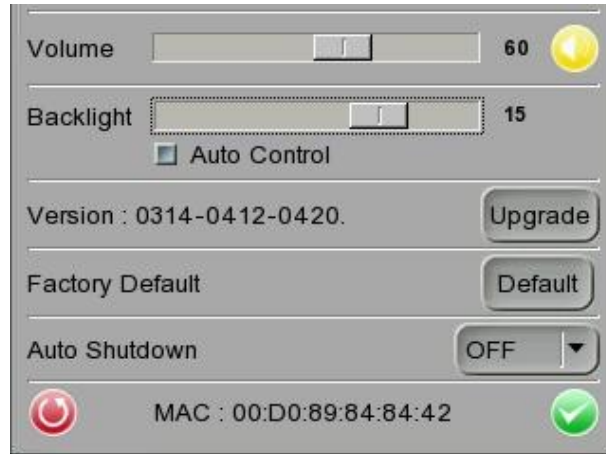

Adjust Device Volume

Move the slider bar of <Volume>. Greater volume represents louder sound.

Adjust Device Screen Brightness (Backlight)

Move the slider bar of <Backlight>. Greater value represents higher brightness.

Tap the <Auto Control> tick box below the <Backlight> slider bar to lock the level on the slider bar.

Tap the <Auto Control> tick box again to cancel the selection; then the slider bar above will become movable again.


Upgrade Firmware

Before implementing firmware upgrade, please make sure the firmware is located in the path: “upgrade\upd_dt02s\” in your USB drive.

Step 1: Tap the <Upgrade> button, and the file selection dialogue will come out.



Step 2: Press the <USB> button, and the firmware in the USB drive shall be found. The firmware details will be displayed in the blank field of the file selection menu.

Step 3: Check the <Complete upgrade> tick box by tapping, and tap <Enter/Save>  button to start upgrade. Then the notice of firmware upgrade confirmation will pop up. Tap <OK> and the firmware upgrade will proceed.


Reset to Factory Defaults

Users can restore the Device system to factory defaults by implementing this function.

Step 1: Tap the <Default> button. Then the notice of resetting to factory default will pop up. Tap <OK> to continue.

Step 2: The pop-up message of stating successful reset with request for system reboot will display on the screen. Tap <OK> and the Device will be shut down.

Step 3: Reboot the Camera Installation Kit after system reset. You will be first directed to the Touch Panel Calibration mode as shown below.

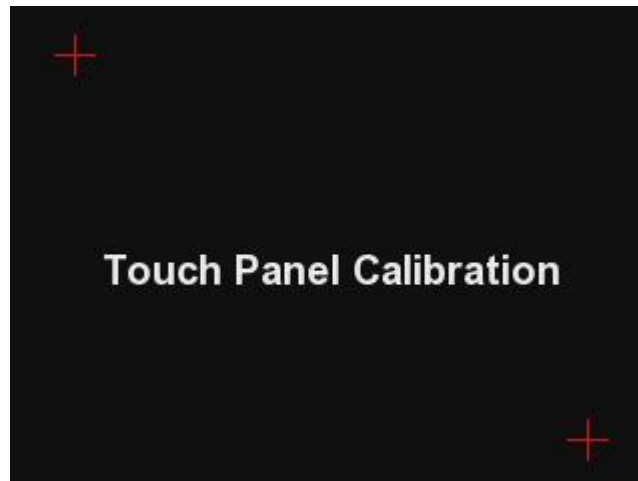

Step 4: Tap the flashing cross on the left top of the screen. And then hit the other flashing cross located diagonally.


Step 5: Then touch each flashing box coming out as instructed.



The screen mode will switch to Main Menu after Touch Panel Calibration is completed.

Auto Shutdown

The system can be automatically shutdown after pre-determined time range when idle. Select the specific time interval from the drop-down list for system auto shutdown. To disable the <Auto Shutdown> function, please select <OFF>.

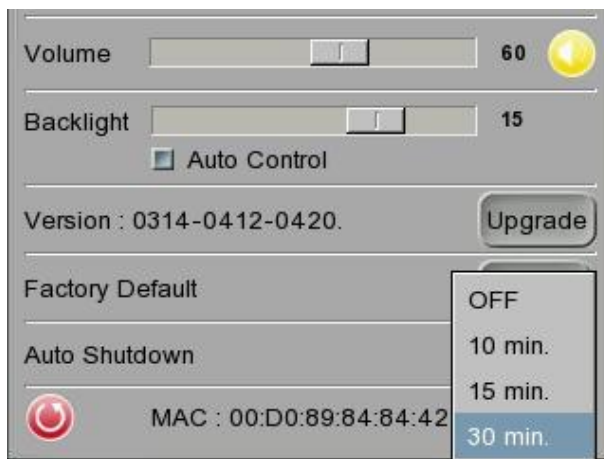



Copyright © 2015, ACTi Corporation All Rights Reserved

7F, No. 1, Alley 20, Lane 407, Sec. 2, Ti-Ding Blvd., Neihu District, Taipei, Taiwan 114, R.O.C.

TEL : +886-2-2656-2588 FAX : +886-2-2656-2599

Email: sales@acti.com